

ZNOTES // A-LEVEL SERIES

visit www.znotes.org



Updated to 2019-21 Syllabus

CIE AS-LEVEL CHEMISTRY 9701

SUMMARIZED NOTES ON THE SYLLABUS

PRACTICAL NOTES

1. ERRORS

$$\text{Estimated error} = \text{No. of readings} \times \frac{\text{smallest div.}}{2}$$

$$\% \text{ Uncertainty} = \frac{\text{Estimated Error}}{\text{Reading}}$$

- **Random error:** usually result from the experimenter's inability to take consistent measurements e.g. in the disappearing cross experiment. It is often due to a problem which persists throughout the entire experiment e.g. random fluctuations in room temperature.
- **Systematic error:** usually caused by measuring incorrectly calibrated apparatus or incorrectly used apparatus e.g. thermometers that consistently read 1°C above the actual temperature, or reading volumes consistently from the wrong part of the meniscus.

2. ACCURACY

APPARATUS	SMALLEST DIVISION	MAX ERROR
BURETTE	• 0.05 cm^3	• 0.1 cm^3
PIPETTE (25 cm^3)		• 0.06 cm^3
VOLUMETRIC FLASK (250 cm^3)		• 0.2 cm^3


3. TITRATIONS

- Burette has to be written to 2 DP.
- Two best titres must be within 0.1 cm^3 of each other
- If first two titres are within 0.1 cm^3 then no need for the 3rd titre
- Repeat and find the average titre volume with total spread of not more than 0.20 cm^3 .

Use of a Burette	
Advantage	Disadvantage
<ul style="list-style-type: none"> • Lower % error • More accurately calibrated 	<ul style="list-style-type: none"> • Takes longer to add the reagent

- Clean all apparatus properly with distilled water prior starting the experiments.

- Whilst pipetting, the tip of the pipette should be placed against the wall of the container. In this way, droplets of the solvent will not spill out of the container.
 - Clean the walls with distilled water to ensure you include all moles of solution.
 - Add indicator as per the instructions. Add too much, and you would get incorrect results.
- Clean burette and pipette with solution, but not volumetric and conical flask as it will give inaccurate values.
- Always read the bottom meniscus of the burette and ensure the burette does not have any air bubbles to remove the jet space.
 - Tap it to free air bubbles.
 - Open the tap to fill the jet space.

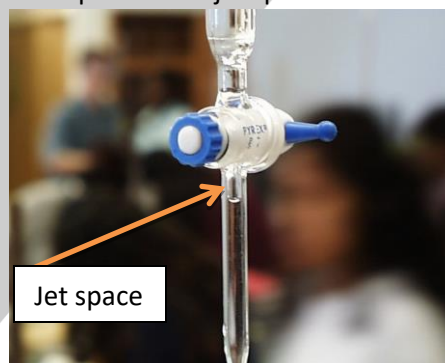

- Always swirl the conical flask.
 - Use a white tile underneath to observe any colour change.
 - Titration ends when any colour change is permanent.



- In your second titration attempt (after the rough titre), adjust the burette tap so that it dispenses drop-wise when the reading is near the end-point to find the exact titre value.

- Titration table should look like this:

Initial Burette Reading/ cm^3	0.00 (It must never start from 50 cm^3)	0.00	0.00
Final Burette Reading/ cm^3			
Titre/ cm^3			
Best Results	(add tick here)		

4. TEMPERATURE

- Record to nearest 0.5°C when thermometer calibrated in 1°C intervals
- Record to nearest 0.1°C when thermometer calibrated in 0.2°C intervals.
- If one procedure has a greater temperature change, it has higher accuracy due to a lower percentage error.

5. CONVERSIONS

$$1000\text{cm}^3 = 1\text{dm}^3 = 0.001\text{m}^3$$

$$0^\circ\text{C} = 273^\circ\text{K}$$

$$1\text{cm}^3 \text{ of water} = 1\text{g}$$

$$1\text{KJ} = 1000\text{J}$$

6. GRAPHS AND TABLES

- When finding gradient, always use a triangle with hypotenuse greater than half of the line.
- Label axis with quantity and unit.
- Plot graph with a fine cross or encircle dots.
- For each heading in a table, write the quantity measured with the unit separated with a slash.
- Keep significant figures consistent in values in a table.
- Make **only one** table of result for each question.
- Circle anomalous results and exclude them from calculations.
- The line of best fit drawn should ignore anomalous results.
- Ensure your graph covers greater than half the page.
- Points must be within half a small square of the correct position.

7. PRACTICAL SKILLS

7.1 Measuring a Quantity


Temperature	Use a thermocouple
Volume	Use burette If 25cm^3 use pipette
Mass	Use electronic scale

- Repeat and average values

7.2 Thermal Experiments

- Insulate container to stop thermal conduction
- Use a lid to seal container to stop thermal convection
- When heating a hydrated salt, heat to constant mass

7.3 How to Collect CO_2

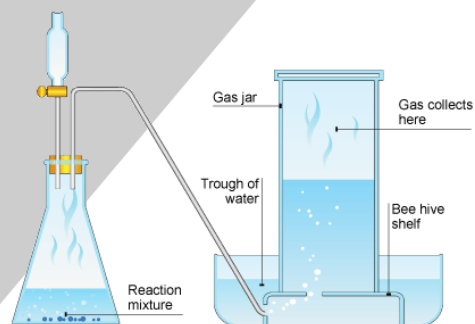

- Water vapour condenses in the water trough
- Ensure there's no air bubbles in the gas jar when setting up the apparatus.

8. SALT ANALYSIS

- If acid added to a salt produces effervescence, carbonate ion is present, so write "effervescence produced turns limewater milky".
- Label your test tubes.
- Cover the mouth of the test tube with your thumb to sense presence of gas.
- Do not add solutions more than that is required. If the question says to add 1cm^3 of X solution, add roughly around that amount.
- When testing for cations using NaOH and NH_3 , mention the observations when excess of these are added.
- If there are series of colour changes observed, mention all of the colours.

8.1 Test for Gases: techniques

- **NH₃**: Damp a red litmus paper with distilled water and keep it near the mouth of the tube. Do not let it touch the test tube. It should turn blue.
- **SO₂**: Smells like rotten eggs.
 - There's a number of ways to test this:
 - You could dip a paper in Potassium dichromate and watch its colour turn from orange to green.
 - If you were to pipe the gas to a solution of Potassium Permanganate, it would turn from pink to colourless.
 - If you dipped damp blue litmus paper, it would turn red.
- **NO₂**: the test tube turns pale brown and disappears if you remove your thumb.

8.2 Test for ions: techniques

- If you are confused between iron (II) and chromium precipitate, keep an eye out for brown precipitate on the surface of the solution. If present, then it is Fe²⁺.
- If you are confused between Ba²⁺ and NH₄¹⁺, heat it. If NH₄¹⁺, ammonia gas will be given out. If you add sulfuric acid to it and it forms white precipitate, then it is barium ion.
- Manganese ions have white precipitate that turns brown in contact with air.
- It's a good idea to revise the solubility table to confirm what the precipitate is.
- If the observations are like the ones mentioned in the Qualitative Analysis Notes at the back of your paper, use that description in the answer.
- A general salt analysis table:


Reagent	Observation
NaOH	
Excess	
NH ₄	
Excess	

9. ENTHALPHY CHANGE


- Temperature is measured in 1 decimal places and units given in degree Celsius.
- When measuring masses, a table with values in 2 d. p. must be setup. For example:

Mass of the container + mass of the lid/g	
Mass of the container + mass of the lid + the sample/g	
Mass of the container + mass of the lid + residue/g	
Mass of sample used/g	

- All the data must have the same number of decimal places.
- Use the equation $Q = mc\Delta T$ for heat released:
 - M is the mass of the total mixture
 - Assuming mass is equivalent to volume where 1g is 1 cm³
 - C is specific heat capacity (assuming it's the same as water i.e. 4.12)
 - ΔT is temperature change
 - No incomplete combustion of fuel occurs
 - Density of the solution is the same as water
 - Units in $J\ mol^{-1}$
- To calculate enthalpy change:
 - Use the equation $\Delta H = Q/mol$
 - Units: $KJ\ mol^{-1}$, so divide heat released (Q) by 1000.
- Enthalpy graphs
 - To find max temp change via extrapolation:

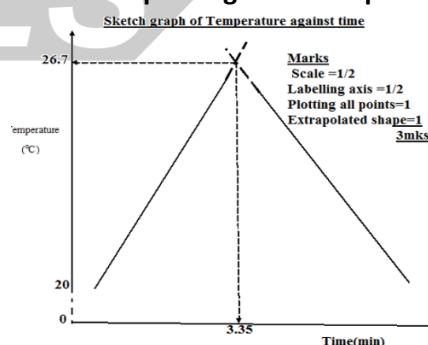


- Exothermic graphs:

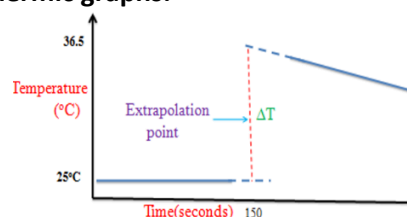

10. RATES OF REACTION

• To calculate rate:

- Appearance of product/change in concentration of product
- Disappearance of reactants/change in mass
- **Unit:** $1/\text{time (s}^{-1}\text{)}$
- Finding gradient of a concentration-time graph
 - The higher the gradient (the steeper the graph), the higher the rate of reaction.
 - The gradient of the graph decreases with time; thus, rate is inversely proportional to time.

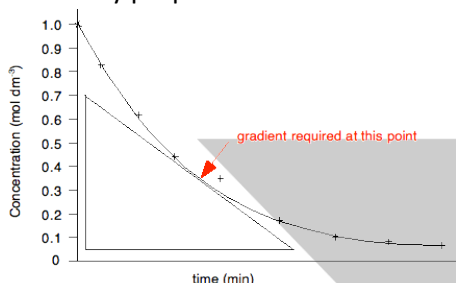

• A general rates table for investigation effect of concentration on rates:

Experiment number	Vol of reagent/ cm^3	Vol of distilled water/ cm^3	Reaction time/s	Rate of reaction/ s^{-1}

- Replace the IV columns with other factors that affect rate depending on the question.
- Take a minimum of 3 experimental readings.
- Ensure all other variables are kept constant so that any change in rate is caused by the IV.

• To improve rate of reaction:

- Increase the concentration of a reactant.
- Increase the temperature of the reactants.
- Increase the surface area of a reactant.
- Add a catalyst to the reaction.

11. MODIFICATIONS

• How do repeats improve the reliability of errors?

- Shows consistent results
- Proves/shows values or trend is similar
- Eliminates anomalous results

• How can you make sure a reagent is in excess?

- If solid in excess, then solid remains at the bottom
- If liquid (e.g. acid in excess), then all of the solid dissolves.

Problem	Solution
CO_2 dissolved in a solution	Heat solution to drive off CO_2
CO_2 escapes	Use smaller surface area of substance
Unequal distribution of heat	Stir
Heat loss	<ul style="list-style-type: none"> • Extra/thicker lagging • Use a lid • Use a vacuum flask
Measurement of volume	Use a burette/pipette
Identification of colour change	Use of colorimeter
Temperature fluctuations	<ul style="list-style-type: none"> • Use of a thermostatic water bath • Switch off the air conditioning • Clean dry thermometer/container • Make sure thermometer doesn't touch walls of container • Use a stirrer to ensure even distribution of heat.
Measurement of temperature	<ul style="list-style-type: none"> • Use a thermometer with a smaller scale division • Use an electronic thermometer to avoid parallax error
Uncertainty in graph intersection/ line of best fit	Repeat/extra readings
Water present in hydrated salt crystals	Heat to constant mass

CIE AS-LEVEL CHEMISTRY//9701



© Copyright 2019, 2016, 2015 by ZNotes

First edition © 2015, by Emir Demirhan, Saif Asmi & Zubair Junjuna for the 2015 syllabus

Second edition © 2016, updated by Saif Asmi & Zubair Junjuna for the 2016-18 syllabus

Third edition © 2019, updated by Pugazharasu for the 2019-21 syllabus

Fourth edition © 2019, content added by Mohammad Saif & Sheikha Aliya Ali for the 2019-21 syllabus

This document contains images and excerpts of text from educational resources available on the internet and printed books. If you are the owner of such media, text or visual, utilized in this document and do not accept its usage then we urge you to contact us and we would immediately replace said media.

No part of this document may be copied or re-uploaded to another website without the express, written permission of the copyright owner. Under no conditions may this document be distributed under the name of false author(s) or sold for financial gain; the document is solely meant for educational purposes and it is to remain a property available to all at no cost. It is currently freely available from the website www.znotes.org

This work is licensed under a Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License.

WWW.
Z
NOTES
.ORG